Beolink 1000

The Beolink 1000 gives access to all the primary functions in a Bang & Olufsen system, including audio and video products and light control.

However, it is optimized for use with one-way communicating products, for example the Beosystem 8500 or 3500, or the Beovision LS TV.

This user's guide gives a general introduction into the use of the Beolink 1000 in conjunction with any compatible Bang & Olufsen audio or video system.

For detailed operating instructions, please refer to the user's guide for the appropriate audio or video system.

Contents

4 *Switching on*

6 *Search functions*

8 *Selecting specific numbers*

10 *Picture and sound control*

Switching off

12 *Teletext*

14 *On-screen menus*

Switching on

The upper group of buttons is used to switch on your video or audio system, or the lights.

TV Switches on to a TV program

SAT Switches on to a satellite program

V.TAPE Plays the tape in the video tape recorder

MENU Calls up the on-screen menus (TV menu, satellite menu or video tape recorder menu)

RADIO Switches on to a radio program

CD Plays the disc in the CD player

A.TAPE Plays the tape in the audio tape recorder

PHONO Plays the record on the turntable

LIGHT Gives access to controlling the lights in your Bang & Olufsen Light Control system

Use the number buttons to select the light picture you want to switch on

Use ▲ or ▼ to turn the lights up or down

Special functions:

LINK Used only in a room with X-tra speakers or X-tra TV

RECORD Press twice to start recording the current audio or video source

SHIFT Accesses special functions

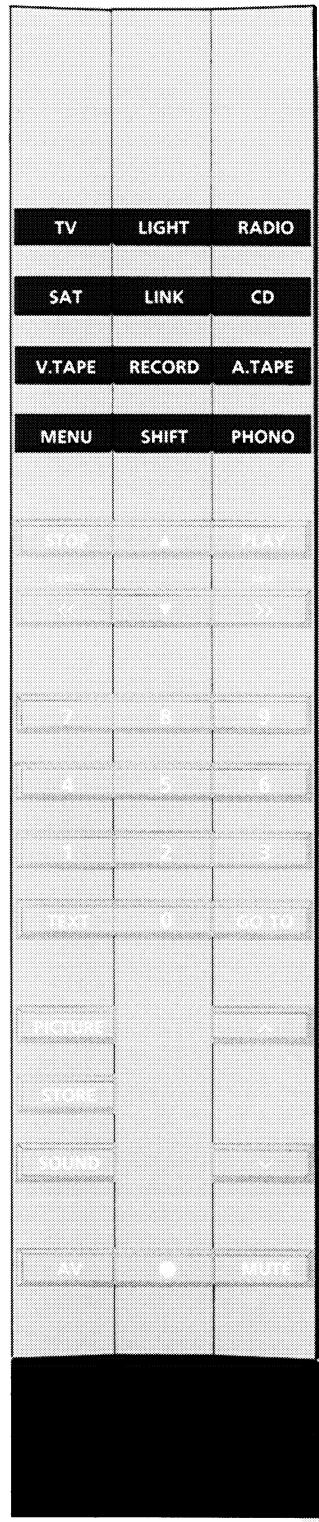

Search functions

The next group of buttons is used to search for specific passages on your tapes (audio or video) or on your CD's.

It also enables you to operate the on-screen menus (see page 14).

If you have called up teletext, you will also use these buttons to control your teletext pages (see page 12).

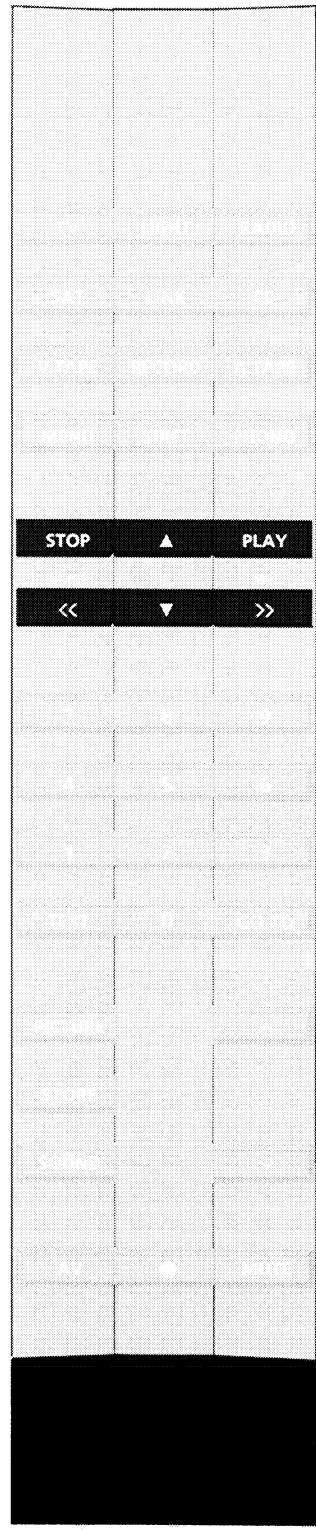

<< Searches backward

>> Searches forward

STOP Stops playing or recording

PLAY Resumes playing

▲ Steps to the next track

▼ Steps to previous tracks

Press once to return to the start of the current track. Press twice to step to the previous track

The step buttons can also be used to step to other TV, satellite or radio programs

Selecting specific numbers

The third group of buttons is your keyboard!

0 *through* **9**

You will use the number buttons to key in figures,

> for example to select specific program numbers or tracks, or to fill in numbers, for example if you are using the on-screen menus to program your video tape recorder

TEXT

Calls up teletext

Use the number buttons to select other memory pages

See page 12 for further details of how to use the teletext functions

GO TO

Press GO TO, then the number buttons to call up a specific teletext page, to find a specific counter position on your tape, or to access a specific frequency (TV, satellite, radio)

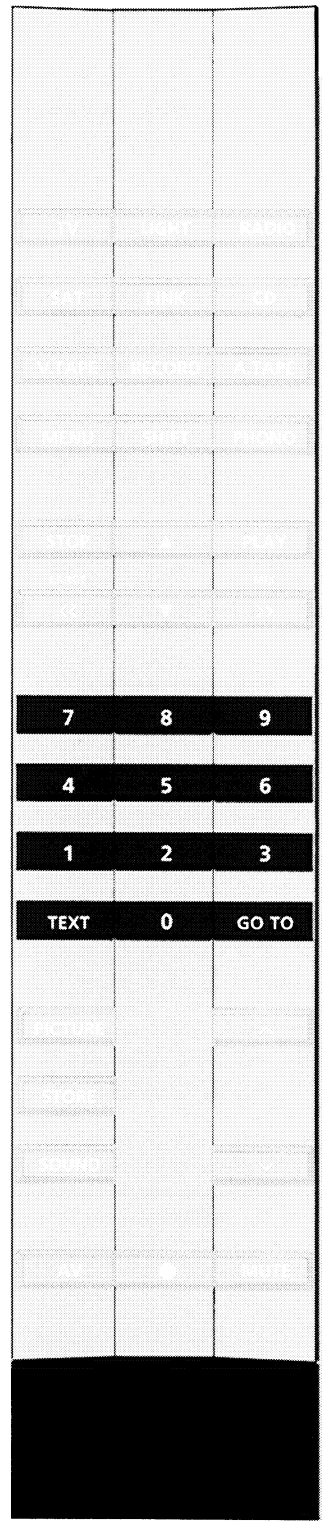

Picture and sound control - Switching off

The lower group of buttons is for adjusting picture and sound levels, and for switching off.

PICTURE Accesses the picture adjustment functions - press ∧ or ∨ to adjust

STORE Accesses the storing function

To store the current picture or sound levels, press PICTURE or SOUND, then STORE twice

SOUND Accesses the sound adjustment functions - press ∧ or ∨ to adjust

∧ Raises the volume

∨ Lowers the volume

AV This button shifts the sound control from the audio system to the video system, and vice versa

> for example, if you were last addressing the audio system and you want to lower the volume in the TV speakers, you press AV, then ∧ or ∨

● Switches off the audio or video system

Hold down the button (or press SHIFT first) to switch off the entire audio/video system

MUTE Mutes and demutes the speakers

SHIFT, then MUTE resets the picture and sound levels

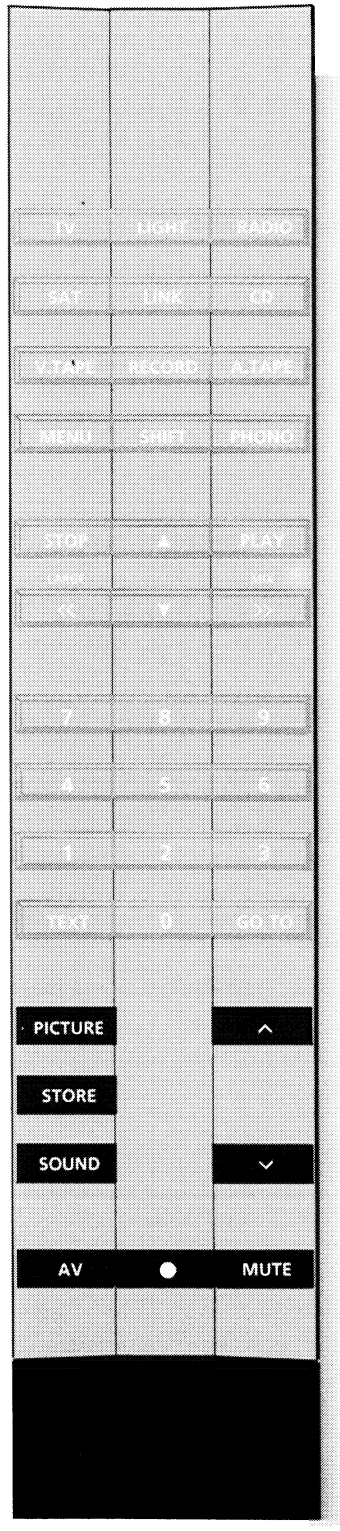

Teletext

The buttons high-lighted here are used to operate the various teletext functions:

TEXT — Switches to teletext

▲ — Steps through the memory pages

or

▼

GO TO — Press GO TO, then use the number buttons to select a specific teletext page

LARGE
<< — Enlarges the text in the upper half of the screen

Press a second time to enlarge the text in the lower half of the screen - press again to return to normal size

MIX
>> — Superimposes the TV picture on the teletext page

Press again to remove the TV picture

STOP — Halfs the current page

Press again to release the page

PLAY — Reveals concealed text

Press again to conceal the text

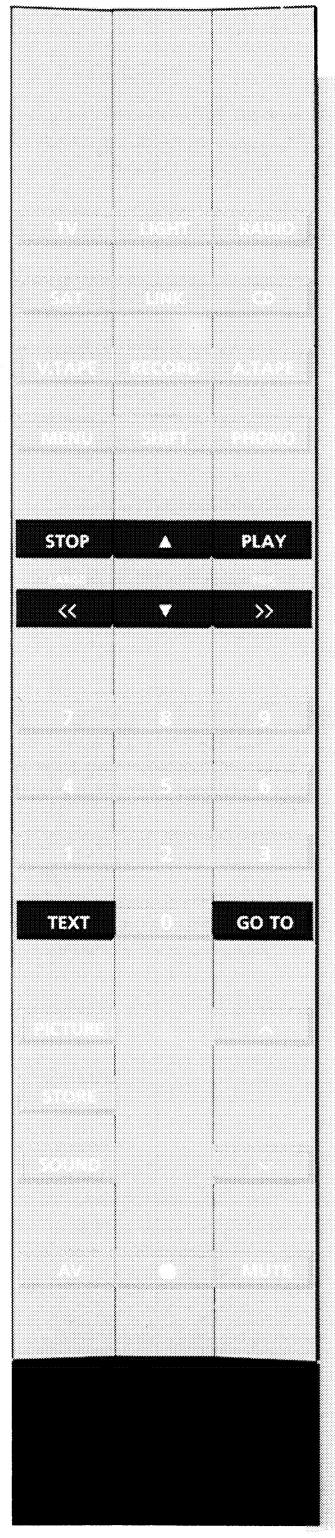

Operating the on-screen menus

The buttons high-lighted here are used to operate the on-screen menus, for example for timer programming of the video tape recorder:

MENU Calls up the on-screen menu

You will see the main menu of the source you have last selected

<< High-lights the previous item in the menu

>> High-lights the next item in the menu

▲ *or* **▼** Reveals the other options, if any, available under the high-lighted item

STOP Reverses through the menu pages - without storing any new information or without selecting a specific function

To remove the menu immediately - without storing any new information or without selecting a specific function, select the source you want to see, for example V.TAPE

PLAY Selects the high-lighted item

Accepts (and stores) the page, including any new information

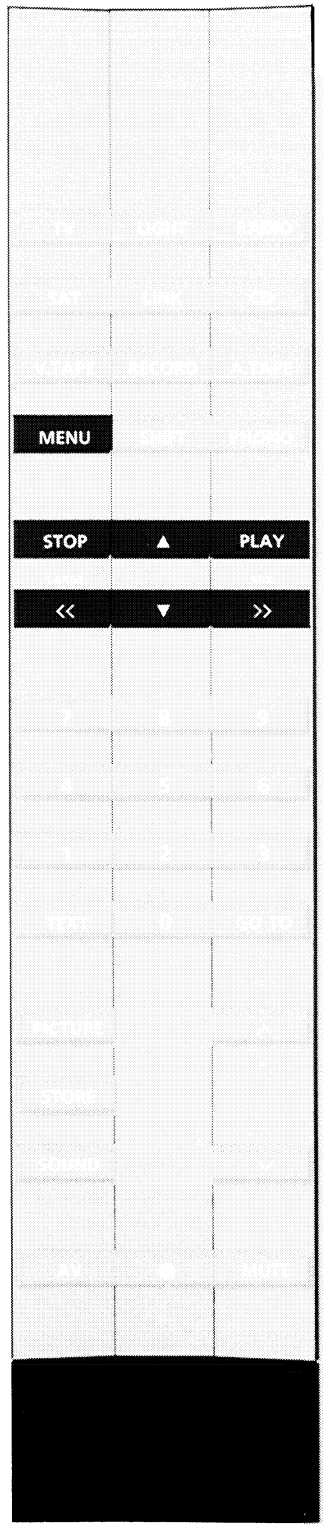

Note: You will find that this Beolink 1000 terminal does not possess a button marked TURN, as does the former Beolink 1000 terminal. To carry out functions which can be obtained by pressing TURN on the former Beolink 1000, you must instead press SHIFT, SOUND on this Beolink 1000 terminal.

International guarantee

This Bang & Olufsen product carries a guarantee against defects in workmanship and materials. The terms of the guarantee apply to the country of purchase but will be met by authorized Bang & Olufsen dealers in other countries. The guarantee period applying to the country of purchase takes priority over guarantee periods applying in other countries, even where differences exist.

In order to obtain service under this guarantee, a certificate stating the following information is required:
- Name of product and type number
- Serial number
- Date of purchase
- Guarantee period
- Dealer's or supplier's signature

3500159 0925